


DATA SHEET

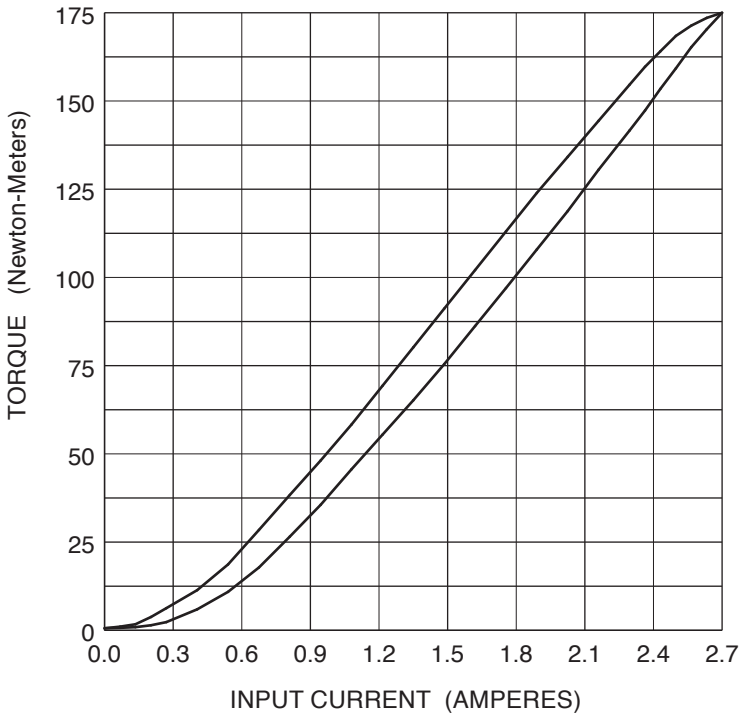


CHARACTERISTICS - With no electrical excitation, the input shaft & output shaft freely rotate. With electrical excitation, the input shaft becomes coupled to the output shaft. Torque is proportional to input current (see torque graph), and independent of slip RPM. While the load torque is less than the output torque, the clutch drives without slip. When the load torque is increased, the clutch will slip smoothly at the torque level set by the coil input current.

- Torque range 3 to 175 Newton-m.
- Maximum RPM 1800 RPM
- Heat dissipation, @ 100 RPM 425 watts
- Heat dissipation, @ 1000 RPM 800 watts
- Heat dissipation, w/ piped air 1200 watts
- Piped air pressure 48 kPa
- Piped air volume 0.17 m³/minute
- Maximum case temperature 75 degrees C
- Maximum overhung load 890 Newtons
- Input Shaft inertia 0.81 kg-m²
- Oupput Shaft Inertia 0.057 kg-m²
- Weight 62 kg.

TORQUE CURVE - Use the lower torque curve when an input current value is approached from 0 amperes. Use the upper torque curve when the input current value is approached from the 100% input current.

At Clutch Temperature :	68°F	160°F
COIL RESISTANCE (ohms)	7.9	9.5
INPUT D.C. VOLTAGE, @ 2.7 amps	21	26

Do not exceed 2.7 amps or 175 N-m torque.

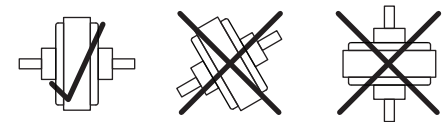

Mount horizontally only.

CLUTCH PERFORMANCE

TORQUE: At 21 volts, the clutch will draw 100% of the rated input current, at 20°C. Output torque will be 175 Newton-m.

POWER SUPPLY: A "constant-current" D.C. power supply is recommended for the best accuracy in open-loop control systems.

HEAT DISSIPATION: Fins on the internal rotor move air which increases cooling with increasing input RPM. A fan or compressed air flowing into cooling port increases cooling. For continuous slip, calculate the heat input by the formula :

$$\text{HEAT (watts)} = \text{SLIP RPM} \times \text{TORQUE (N-m)} / 9.6$$

Using the above formula: At rated torque, the maximum continuous slip RPM (input RPM - output RPM) is 23, (66 with compressed air). The clutch can dissipate higher amounts of heat for short periods of time, but the average must not exceed ratings. The case temperature must never exceed 75°F.

INSTALLATION INFORMATION

Do not drop, or strike with a hammer. Keep away from fine metal filings and fine metal chips. Shield from liquids.

Do not attempt to remove the clutch shafts or retaining rings.

All pulleys, sprockets, couplings, etc. must mount as slide fits. Use a puller to remove stuck components. Never pry or hammer to install or remove components.

Always use a flexible coupling when connecting the shaft of a rigidly mounted clutch to the shaft of another rigidly mounted device. Precisely align both shafts.

Always electrically ground the clutch.

COMPRESSED AIR COOLING For additional cooling, connect low pressure (48 kPa max.) compressed air to the 3/8-19 BSPT tapped hole. (British Standard Tapered Pipe Thread). An adaptor fitting to 3/8" hose is included. Use clean, filtered, oil free, moisture free air.

