


DATA SHEET

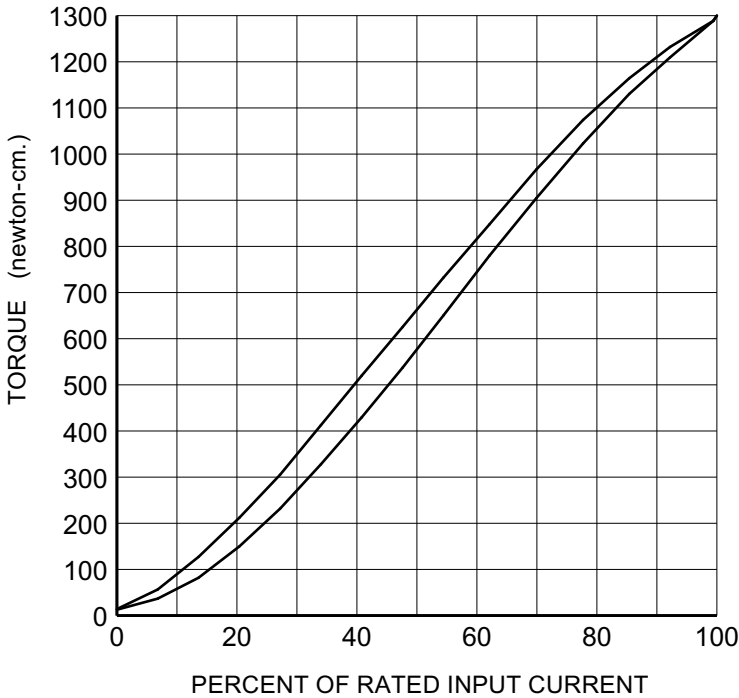

CHARACTERISTICS - With no electrical excitation, the shaft freely rotates. With electrical excitation, the shaft becomes coupled to the housing. Torque is proportional to input current (see torque graph), and independent of RPM. While the load torque is less than the output torque, the shaft won't rotate. When the load torque is increased, the brake will slip smoothly at the torque level set by the coil input current.

- Torque range 17 to 1300 newton-cm.
- Maximum RPM 1800 RPM
- Maximum heat dissipation 55 watts
- Maximum case temperature 75 degrees C
- Maximum overhung load 54 kg.
- Shaft inertia 6.9×10^{-5} kg-m²
- Response (unforced) 90 mSec.
- Response (forced) 45 mSec.
- Weight 3.6 kg.

← Use the lower curve when approaching a current value from 0 amps. Use the upper curve when approaching a current value from 100% rated current.

	6 V	12 V	24 V	90 V
COIL RESISTANCE (ohms)	2.7	12	47	615
100% INPUT CURRENT (amps)	2.1	0.95	0.49	0.14

← Rated D.C. coil voltages available: 6 VDC (yellow leads), 12 VDC (green leads), 24 VDC (red leads), 90 VDC (blue leads).

BRAKE PERFORMANCE

TORQUE: At the rated voltage, the brake will draw 100% of the rated input current. Output torque will be 1300 newton-cm.

POWER SUPPLY: A "constant-current" D.C. power supply is recommended for the best accuracy in open-loop control systems. This type of power supply will maintain a fixed (but adjustable) output current, regardless of the temperature of the brake, so output torque is constant (but adjustable).

HEAT DISSIPATION: The brake can dissipate 55 slip (thermal) watts continuously. For continuous slip, calculate the heat input by the formula :

$$\text{HEAT (watts)} = \text{RPM} \times \text{TORQUE (N-cm)} / 960$$

Using the above formula: At rated torque, the maximum continuous slip RPM is 40. The brake can dissipate higher amounts of heat for short periods of time, but the average must not exceed 55 watts. The case temperature must never exceed 75 degrees C.

INSTALLATION INFORMATION

Do not drop, or strike with a hammer. Keep away from fine metal filings and fine metal chips. Shield from liquids.

Do not attempt to remove the brake shaft or retaining rings.

All pulleys, sprockets, couplings, thru-shafts (hollow shaft models), etc. must mount as slide fits. Use a puller to remove stuck components. Never pry or hammer to install or remove components.

Solid Shaft Models: Center your set screw on the flat of the brake shaft.

Hollow Shaft Models: Use a 3.175 mm (.125"dia.) pin to fasten your thru shaft to the brake shaft.

Always use a flexible coupling when connecting the shaft of a rigidly mounted brake to the shaft another rigidly mounted device. Precisely align both shafts.

Always electrically ground the brake.

